

SO & CO

- NEW YORK -

INSTRUCTION MANUAL - D4 VR33 - CHRONOGRAPH MOVEMENT

IMPORTANT NOTE REGARDING SCREW-IN CROWN

Some of our models are fitted with a screw-in crown. To use the setting functions, first UNSCREW the crown by turning it counter-clockwise until it slightly pops up from the watch body. The watch is now ready to be set according to the instructions. AFTER completing the setting, gently push the crown in, and then SCREW IT IN by turning it clockwise, until it is tight against the case of the watch. The crown MUST BE FULLY SCREWED IN for the watch to be water resistant.

WATCH DATE & TIME SETTING

QUICK SETTING OF DATE:


CROWN POSITION 1:

- Gently pull the Crown to position 1.
- Turn the Crown clockwise to set the Date.
- Push the Crown back to position 0.

Time Setting Position

CROWN POSITION 2:

- Gently Pull the Crown to position 2.
- Rotate the Crown to Set the desired time.
- Push the Crown back to position 0.

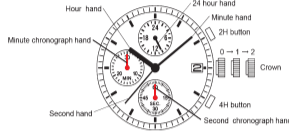

CAUTION:

- If the quick date is set between 21:00hrs to 1:00hr, the date may not change on the following day.
- DO NOT USE THE QUICK SETTING BETWEEN 21:00 HRS. TO 04:00 HRS. AS IT MAY DAMAGE THE MOVEMENT MECHANISM

CHRONOGRAPH MODE

WARNING:

Before starting the time, put back the chronograph hands to their original position.

CHRONOGRAPH COUNTING:

- Press Button "2H" to start and stop the chronograph second hand.
- Read the time in Chronograph minutes and second from 9H sub dial and chronograph second hand.
- (Ex: 5mins & 4secs. See picture)
- Reset the counters to Zero by pressing Button "4H"

CHRONOGRAPH RESET: (If either of the stop watch hands are not in the "0" position)

1. Pull the crown out to second click, position 2.
2. Press button 2H or 4H to reset all stopwatch hands to "0" position.
 - The Stopwatch minute hand moves correspondingly with the stopwatch second hand.
 - The hands move quickly if the respective buttons are kept pressed.
3. Push the crown back to normal position.


CHRONOGRAPH OPERATION



| | Crown position | | |
|-----------|------------------------|--|---|
| | 0 click | 1st click | 2nd click |
| Crown | Free | Turn counter-clockwise for date change | Time setting |
| 2H button | Chronograph Start/Stop | Chronograph Start/Stop | Chronograph hands Setting (stopwatch) |
| 4H button | Chronograph Reset | Chronograph Reset | Chronograph hands Setting (counter-clockwise) |

Chronograph function

Second chronograph hand is capable of timing 30 minutes. (30 seconds x 30 times)
Minute chronograph hand is capable of timing 30 minutes.

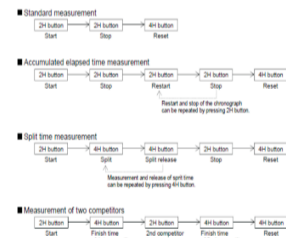

WATER RESISTANT

Your New Watch is a water-resistant Watch. Check the Marking on the back of the watch, find below the relevant usage recommendation.

* Water Resistant 3ATM or 30 METERS (100 Feet)

Shall withstand splashes of water while washing the hand. But should not be worn while swimming or diving.

* Water Resistant 5ATM or 50 METERS (165 Feet)

Suitable for showering or swimming in shallow water.

* Water Resistant 10ATM or 100 METERS (330 Feet)

Suitable for swimming, snorkeling, but should not be worn while scuba diving.

We don't recommend swimming or diving with your watch unless it has a screw down crown and is water resistant to at least 10ATM or 100 Meters

GENERAL CARE FOR A WATER RESISTANT WATCH

- DO NOT OPERATE ANY BUTTONS WHEN THE WATCH IS WET OR IN WATER
- DO NOT WEAR THE WATCH IN A HOT SHOWER OR SAUNA EXTREME HEAT CAN DAMAGE THE WATCH
- AFTER USE IN SALT WATER OR CONTACT WITH SAND OR MUD, RINSE THE WATCH IN STREAM OF FRESH WATER AND DRY IT WITH SOFT CLOTH.
- LEATHER STRAPS ARE MORE EASILY DAMAGED BY FREQUENT EXPOSURE TO WATER. AFTER EVERY USE IN WATER, WIPE THE STRAP WITH A SOFT CLOTH, TO IMPROVE THE LIFE OF THE STRAP.